

MP2, Mixer

Above Deck Mixers

INSTALLATION

- 1 - Unscrew the securing nut # 15 I and remove the washers # 15H & G from the mixer tubing.
- 2 - Loosen the set screw # 15 B and remove the handle # 15 A. Remove the retainer nut # 15 C to allow plate insertion.
- 3 - DO NOT remove the large nut # 15 E. It is factory locked.
- 4 - Insert the mixer assembly # 15 E from the top of the black plastic base # 15 F. Align the blue dots for correct position.
- 5 - Insert the threaded plastic shank # 15 K onto the black gasket base # 15 F.
- 6 - Place the chrome deck plate # 15 D over the assembled parts.
- 7 - Screw in the nut #15 C to the mixer shaft and secure. Place the Chrome handle # 15 A and lock with set screw #15 B.
- 8 - To mount the faucet body to this assembly, place the rubber gasket under the faucet base. (rubber gasket supplied with the faucet)
- 9 - Mount the faucet body with the two screws # 15 J, attach to the deck plate. Normally, the mixer is mounted on the right side of the faucet.
- 10 - Mount on the sink . The faucet body brass shank and the electrical wires mount through the center hole.
- 11 - Center the faucet on the sink and secure with the black plastic thumb nut # 15 L on the left side.
- 12 - Slip over the water tubes the sealing washer # 15G, and the metal washer #15 H in this order. Place the brass securing nut assembly #15 I and tighten by hand until it touches the sink base. With a philips screwdriver, lightly tighten the two securing screws.
- 13 - Follow the installation notes supplied with the faucet to complete the mounting.

