

intelligent™ Electronic Lav Faucet e/w Above Deck Mixer,

Battery Operated



Product Description

- Solid brass electronic faucet
- Above deck Temp Mixer on 4" Plate
- Designer Series, high arc spout
- Computer based micro controller w/specially designed infrared sensors to detect within a required distance.
- Auto shut-off 1 minute
- Modular design to accept optional equipment
- Battery housing e/w 6V sealed polarized plug.

Features

- Temp control Above deck mixer, cold drinking water to tempered washing.
- Sealed waterproof electronics
- Vandal Proof / Tamper cycle
- Smooth flow non-splash laminar nozzle

Certification

IAPM0 cUPC ADA / ANSI Compliant

Model Choice:

1870B-4M2 Mech. Mixer 1870B-4M3 Thermostatic Mixer


Options

04- 159L Nozzle, vandal proof 1.5 gpm

04- 104 Nozzle, .5 gpm


04- 116 Nozzle, vandal proof 0.5 gpm note; options above could be indicated

in the above model no.

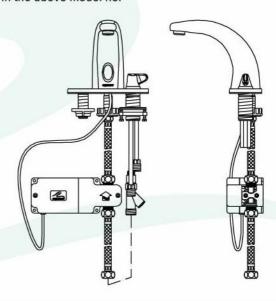



intelligent™ Electronic Lav Faucet e/w Above Deck Mixer, Battery Operated TECHNICAL SPECIFICATIONS

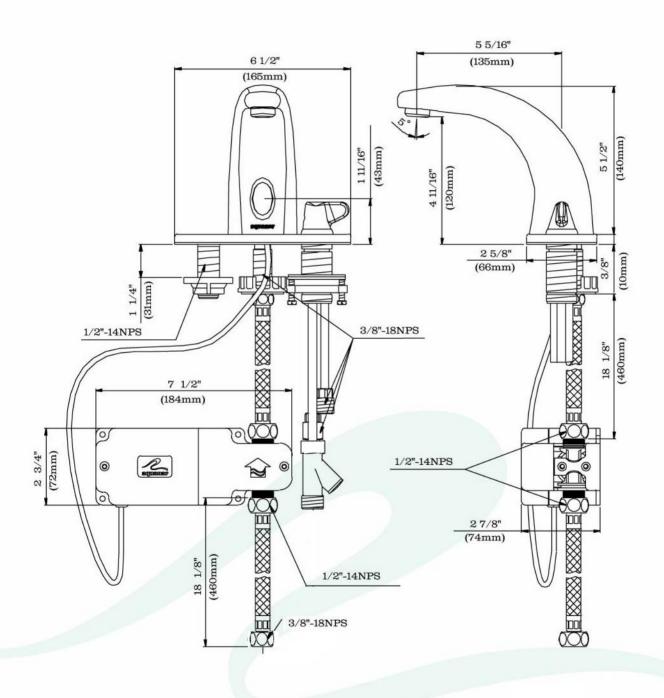



intelligent™ Electronic Lav Faucet e/w Above Deck Mixer, Battery Operated PRODUCT DESCRIPTION

Function:

The electronic module detects the presence of the user. A computer based micro-processor with specially designed infra-red sensors is programmed to detect a user within a required distance.

Packaging:

The entire unit is constructed of non-corrosive materials. The faucet is a solid brass body to withstand abuse and a chrome polish finish to ensure years of quality appearance. The comfort 'soft-flow' laminar nozzle highly reduces splash and is equipped with a flow regulator. The electronic module is a single compact unit with the emitter, receiver and micro-controller circuit as a one piece and sealed unit within the faucet body. There are no unnecessary separate circuits and related wiring. Simplicity at its best. There are no elector-mechanical devices (for adjustments) to hinder sealing or which may require troublesome disassembly.

The battery pack is neatly packaged to house the battery holder (4 x 1.5Vdc 'C' batteries), cable assembly with polarized gold plated contacts and sealed connector of the highest quality. The pack also holds the solenoid valve e/w easy clean barrel mesh filter.

MP2 - The faucet is equipped with a 4" deck plate, including an Above Deck water Mixer with a 'comfort grip' temperature select handle. *Feature* -The mixer is specially designed to give a range of **cold drinking water**, to a comfortable washing temperature selection, all with an easy turn of the handle.

MP3 - This faucet is equipped with an anti-scald thermostatic mixer. *Feature* -The mixer is specially designed to give a range of **cold drinking water**, to a comfortable washing temperature selection. The comfort grip handle has a 38° safety indent and limits temp to approx 48° C.

Technical Specifications:

Electrical requirements: 4 x 1.5 Vdc 'C' Batteries

Electro-mechanical valve: 6 Vdc
Operating water pressure: 15 to 150 psi

M2 Mechanical Mixer Temp. Cold to Tempered selected

M3 Thermostatic Mixer Temp. Cold to 38 $^{\circ}$ C / 48 $^{\circ}$ C

Anti-scald feature / Safety indent

at 38" C / back flow stops.

Water flow rate: 1.5 gpm regulated

Water connection: 3/8" NPS



intelligent™ Electronic Lav Faucet e/w Above Deck Mixer, Battery Operated FUNCTION INFORMATION

A) Non-Interrupt Cycle (Run Time) 1 to 15 seconds
B) Detect Delay (Detect Time) 0 to 14 seconds
C) Cold start (Warm-Up) 2 to 30 seconds

D) Sensitivity (Detect Range) level 1 to level 15 (to 7")
E) Tamper cycle 1 min. Auto-stop pre-set

A) Non-Interrupt Cycle (Run Time)

The user may momentarily be out of detection range, therefore a 2 second non-interrupt cycle is factory-programmed to accommodate such absences and allow continuous water flow * The non-interrupt cycle is re-programmable from 1-15 seconds.

B) Detect Delay (Detect Time)

The detection delay is set at 0 second. (Instantaneous)

*The detect delay cycle is re-programmable from 0-14 seconds

C) Cold start (Warm-Up)

This *intelligent™* feature allows warm water to arrive at the faucet. Activate the faucet and as soon as the water flows, remove hand. The faucet runs by itself for the 6 sec. period, or an allotted time if you wish to re-program for your building application.

NOTE: To conserve water, the cold start cycle is automatically available only once in a 30-minute period. * The cold start cycle is re-programmable from 2-30 seconds.

D) Sensitivity (Detect Range)

The detection range is adjustable through re-programming and detects up to 7". Factory-programmed detection range is set at level 7.

- To increase range, re-program sensitivity from level 9 to 15. (15 for a longer range)
- To decrease range, re-program sensitivity from level 7 to 1. (1 for a shorter range)
- * The sensitivity cycle is re-programmable from level 1 to 15.

Function Feedback

Upon activation, when the faucet detects a user or object, a light appears on the detection. This confirms detection and also used in adjustments for different detections distances to accomodate various types of sinks and use.


E) Tamper cycle

To prevent tampering (for example, if for some reason an object is permanently placed in the detect range to simulate a user) the faucet will run, but for a maximum time of 1 minute. The tamper cycle is not adjustable. The unit will shut off and the control will return to its regular operation only when the object is removed.



intelligent™ Electronic Lav Faucet e/w Above Deck Mixer, Battery Operated INSTALLATION STEPS

- 1 Place the black rubber base gasket #3 on the faucet body #1.
- 2 With the 2 Hex Socket screws supplied, attach the assembled Mixer/plate # 15 to the faucet body # 1. (See AQN-4MP2 Mixer Instruction sheet)
- 3 Install the faucet on the sink by passing the electrical wires / body center shank and the Mixer portion thru the right side sink hole. Screw on the one black plastic thumb nut on the left side, carefully positioning the faucet centered in the sink, and tighten. Hand tightening will suffice.
- 4 With faucet in position, slip onto the brass shank, the plastic wire washer, metal washer and brass nut # 5.
- 5 Note. The plastic clearance washer is design to allow passage of the cable. Insert properly to avoid pinching cable. Position carefully the wire washer, slip up the flat washer and screw brass nut until snug. Verify again for correct wire clearance and tighten nut as required.
- 6 Slip the rubber washer, metal washer and brass retainer nut thru the mixer water connections. Screw in as far as possible by hand. Use the two screws on the retainer nut to obtain proper tightness.
- 7 With battery pack in hand, find suitable mounting wall location, keeping in mind the length of the connecting upper braided hose # 23. Mark and fix to the wall.
 [Note: Observe the 'up' arrow on pack]
- 8 Connect Y filter # 16 to mixer tempered inlet tube.
- 9 On mixer, connect Hot water source to inlet marked red. Connect the Cold water source to the inlet marked blue.
- 10 Screw on lower braided hose # 8 from the mixer tempered outlet tube to the lower entry side of solenoid valve.
- 11 Attach the upper braided hose #23 to solenoid #19.
- 12 To connect the electrical cable to the battery pack, remove cover (left side) to expose the connector. Remove rubber grommet from pack and slip over the faucet cable. Connect the polarized 4 pin connectors together. Place the cable and grommet to the battery pack, making sure the connector is inside the pack. Replace cover with captive screw.
- 13 Open water source and check for leaks. Place hand in front of and check for correct function.
- 14 Check mixer water temperature. At blue marker on deck, full cold water is for drinking purposes and the red marker is for tempered washing water.

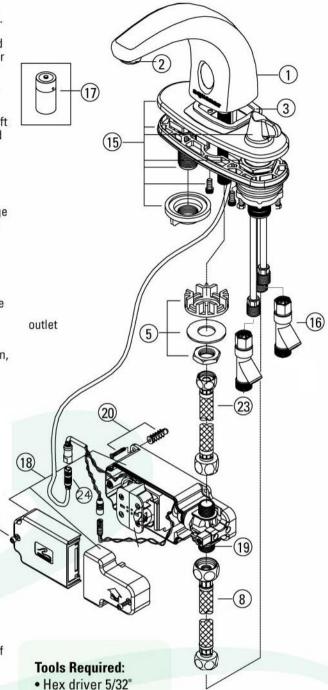

Adjustable Wrench

specification sheet 1

On mixer, connect Hot water source to inlet marked red. Connect the Cold water source to the inlet marked blue.



intelligent™ Electronic Lav Faucet e/w Above Deck Mixer, Battery Operated MAINTENANCE

Aquanar products are design and engineered with precision and specially chosen components. Replacement with genuine Aquanar parts are an important factor in product performance.

Non genuine parts may void warrenty.

Cleaning the Solenoid valve / filter


- · Close water source.
- With flat screwdriver, remove the access 'screw plug' of the 'Y' filter.
- A small pail can hold dripping water to keep floor clean.
- Remove barrel mesh filter. Remove debris and rinse out.

Product Care

Aquanar products are constructed of the highest quality materials. although durable and robust, abrasives and harsh chemicals can damage surfaces. Clean chrome polish and lens with a soft damp cloth. Dry with a soft towel.

Re-assembling

Reinstall the filter and o-ring sealed connector, in reverse of the above steps.

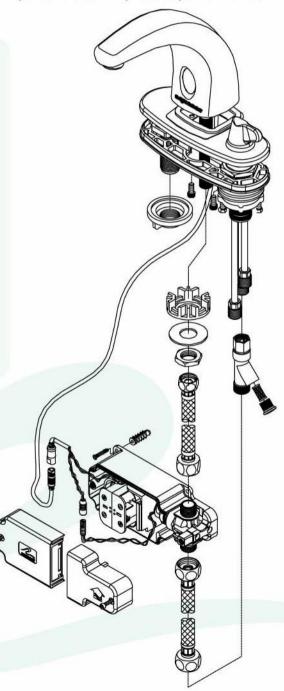



intelligent™ Electronic Lav Faucet e/w Above Deck Mixer, Battery Operated PARTS LIST

#	Description	Part Number
1	Solid brass body C.P.	02-154
2	Laminar nozzle 1.5 gpm	04-158L
3	Base seal, rubber	02-087
5	Nut, Washer & Wire washer	01-088
13	Wedge block	02-070
14	Mounting block with screw	01-089
15	4" plate assembly and mixer	4M2 or 4M3
16	"Y" Filter	01-081
17	Battery 'C' 1.5v Alky	04-082
18	Battery pack assy.	01-050
19		04-176
20		08-040
21		01-082
	Screw M4 x 20 mm	08-047
23	Flexible hose, upper 18" 1/2 x 3/8	04-068
24	Electronic module	AQN-1870B-2
		18
	Ç	22